


AFB-200

Dual Rx Antenna Fiber Box

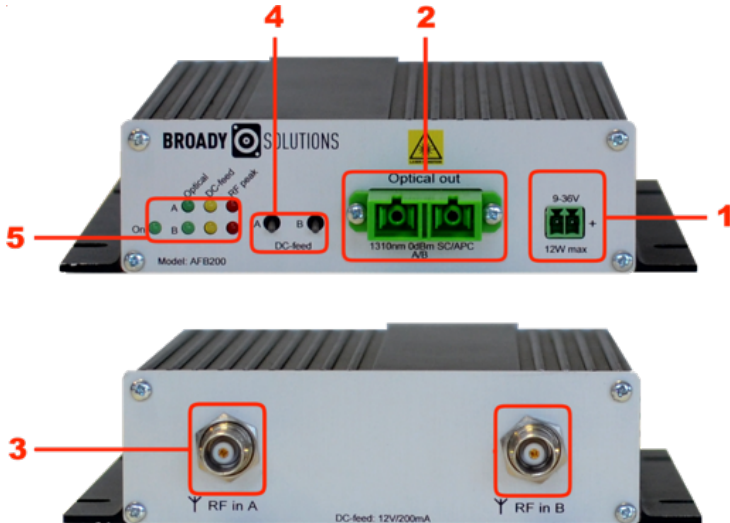

Instructions

- 1 - Power** : 9-36Vdc-8W power supply
- 2 - Fiber Optics** : SC/APC fiber optics cables linked to fiber receiver AFR / ACF / ACH
- 3 - RF in** : Reception Antennas A & B
Passive up to 5m with RG58 and 10m with RG213 cable
Active up to 35 m with RG58 and 70m with RG213 cable
- 4 - DC-feed** : Activate 12V/200mA power supply for active antennas

LED Indications (5)

- > **Power** : Green color indicates that the device is on
- > **Optical** : Green color indicates that optical converter is active
- > **DC-feed** : Orange color indicates that supply is enabled for active antennas. This orange LED will blink in case of short circuit in cable or connector.
- > **RF Peak** : This red LED lights up when RF level is too high. This may come from a wrong antenna booster setting or a transmitter too close from the antenna.

