

AFR-200

Dual Channel 2 Fiber Antennas Receiver



Instructions

- > **Power** : 220V power supply
- > **Fiber optics** : Neutrik OpticalCon Duo APC or LC/APC fiber optics cables linked to Antenna Fiber Boxes (AFB-150, AFB-250 for Neutrik version and AFB-100, AFB-200 for SC version)
A/B inputs for duplex version
A and B inputs for simplex version
SC/APC connectors for installation version
- > **RF out** : BNC outputs A and B to one or more wireless diversity receivers

LED Indications

- > **Power** : Green color lights up when the device is on
- > **Optical** : Green color indicates that optical link is active
Beyond 3 dB power loss in optical link, this LED will blink

